USER'S GUIDE

SYLVANIA

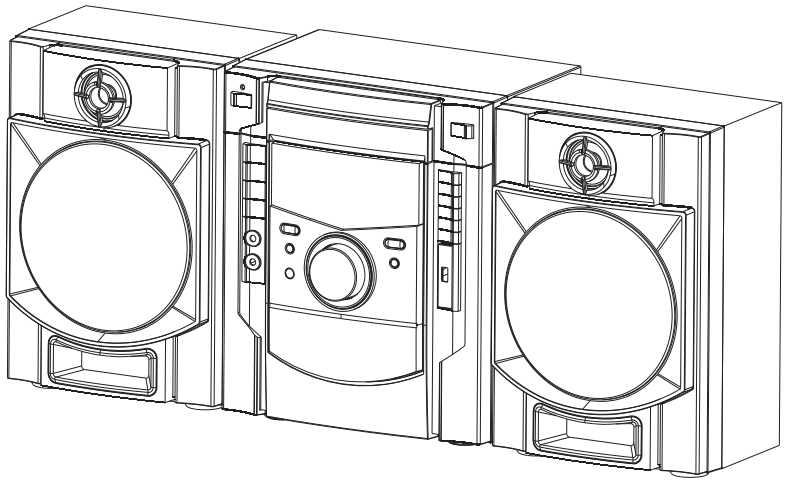

SRCD2731BT

Bluetooth CD Radio Microsystem

PLEASE READ BEFORE OPERATING THIS EQUIPMENT

Warnings and Precautions

CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

AVERTISSEMENT: Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.

CAUTION: Use of any controls or adjustments or performance of procedures other than those herein specifed may result in hazardous radiation exposure.

WARNING: Changes or modifcations to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.

WARNING: Use of this unit near fuorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fuorescent lighting, as it may be the cause.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

PRÉCAUTION: Danger d'explosion si les piles sont remplacées de faon incorrect. Remplacer les piles seulement par le méme type de pile ou l'équivalent.

WARNING: There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.

WARNING: The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste

WARNING: Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.

WARNING : Shock hazard - Do Not Open.

AVIC:RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR

Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected form the mains socket outlet completely.

La prise du secteur est utilisé pour déconnecter le système.

La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'èntrée, la prise doit tre débranchée du secteur.

WARNING : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning fash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of suffcient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

Important Safety Instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not ft into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specifed by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specifed by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualifed service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Warnings

NOTE: This equipmenthas beentestedand found to comply or has been dropped.
with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help .

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects flled with liquids, such as vases, shall be placed on apparatus.
  L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected form the mains socket outlet completely.
  La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
  Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the rear or back of the apparatus.
  Attention marquage est situé à l'arrière ou à l'arrière de l'appareil.
- The marking information is located at the rear or back of apparatus.
  Les informations de marquage est situé à l'arrière ou à l'arrière de l'appareil.

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

Introduction

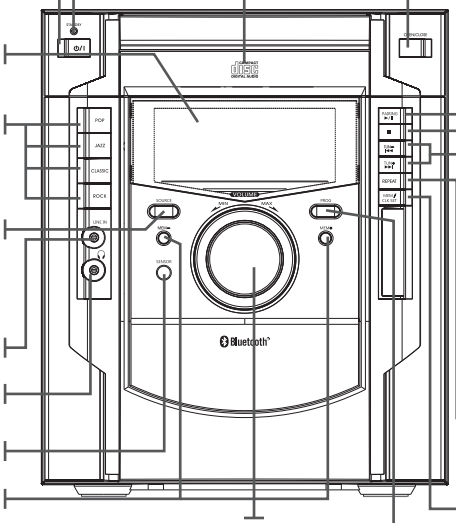

STANDBY INDICATOR
LED light up indicated Standby mode.

POWER
Press to power the music system off or on.

LCD DISPLAY

EQ
Press to switch the preset EQ to Pop, Jazz, Classic, Rock or Normal.

SOURCE
Press to switch to CD, LINE IN, Radio or Bluetooth modes.

3.5MM AUDIO INPUT

3.5MM HEADPHONE INPUT

REMOTE SENSOR

MEM(+/-)
Press the cycle through saved radio stations.

CD COMPARTMENT

VOLUME
Turn to adjust the volume up or down.

OPEN/CLOSE
Press to open or close the CD door.

PAIRING/PLAY/PAUSE
Press to play or pause a loaded CD.
Press & hold to begin pairing a Bluetooth device.

STOP
Press to stop a CD during play.

SKIP/SEARCH/TUNE(+/-)
Press to skip between tracks on loaded CD or Bluetooth.

Press and hold to search through an individual track.

Press to tune the FM radio.

Press to adjust the time when setting the clock.

REPEAT
Press to repeat the current track or an entire album/playlist.

MEN/CLK SET
Press to set the clock or save a radio station.

PROGRAM
Press to program a loaded disc to play tracks in a specified order.

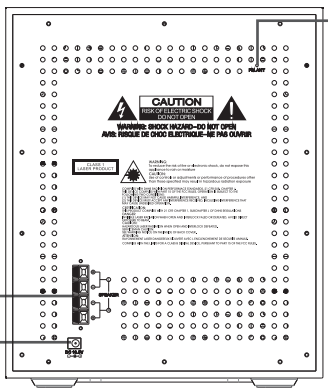

SPEAKER TERMINAL
Connected to external speakers.

DC POWER INPUT

FM ANTENNA WIRE

PAIRING/PLAY/PAUSE
Press to play or pause a loaded CD.
Press & hold to begin pairing a Bluetooth device.

MEN/CLK SET
Press to set the clock or save a radio station.

STANDBY
Pres to power the music system off or on.

OPEN/CLOSE
Press to open or close the CD door.

SOURCE
Press to switch to CD, LINE IN, Radio or Bluetooth modes.

REPEAT
Press to repeat the current track or an entire album/playlist.

SKIP/SEARCH/TUNE-
Press to skip between tracks on loaded CD or Bluetooth.
Press and hold to search through an individual track.
Press to tune the FM radio.
Press to adjust the time when setting the clock.

SKIP/SEARCH/TUNE+
Press to skip between tracks on loaded CD or Bluetooth.
Press and hold to search through an individual track.
Press to tune the FM radio.
Press to adjust the time when setting the clock.

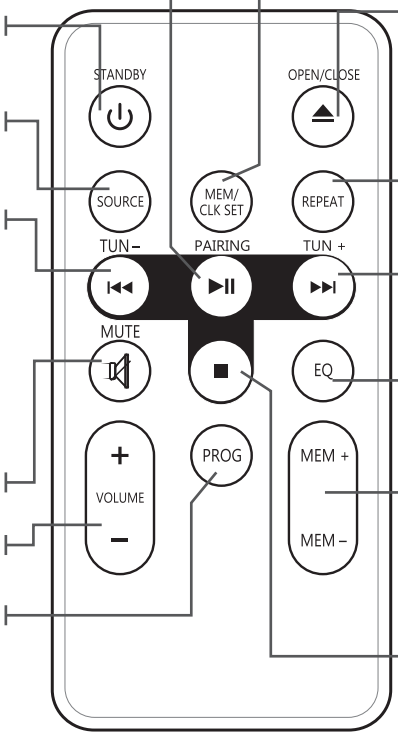

MUTE
Press to mute the volume.

VOLUME
Press to adjust the volume.

EQ
Press to switch the preset EQ to Pop, Jazz, Classic, Rock or Normal.

MEM(+/-)
Press the cycle through saved radio stations.

PROGRAM
Press to program a loaded disc to play tracks in a specified order.

STOP
Press to stop a CD during play.

Setup

Power

Plug the included AC/DC power adapter into the DC POWER INPUT on the music system and an AC power outlet to power the music system.

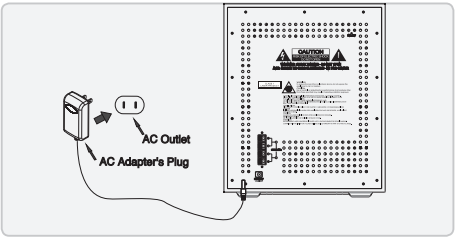

Battery Power

Requires 1, CR2025, battery (pre-installed).

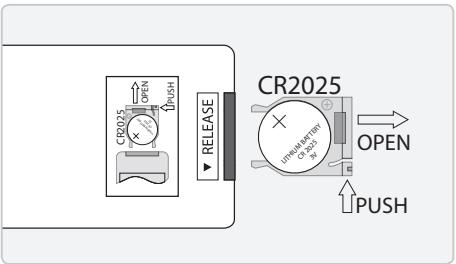

Clock

Setting the Clock

1. Press the **POWER** button to turn the music system off.
2. Press and hold the **MEM/CLK SET** button on the music system.
   The hour will begin to blink on the display.
3. Press the **SKIP/SEARCH** buttons to adjust the hour.
   An "AM" indicator will appear on the display when the time is set to the AM. A "PM" indicator will appear on the display when the time is set to the PM.
4. Press the **MEM/CLK SET** button to set the minute.
   The minute will begin to blink on the display.
5. Press the **SKIP/SEARCH** buttons to adjust the minute.
6. Press the **MEM/CLK SET** button to finish setting the clock

CD

Loading a CD

1. Press the **OPEN/CLOSE** button on the top of the music system to open the CD door.
2. Load a CD into the music system, label side facing up.
3. Close the CD door.

Playing a CD

1. Follow the instructions for Loading a CD.
2. Press the **POWER** button to power the music system on.
3. Press the **SOURCE** button to switch to CD mode. The CD will playing automatically.

   The track number will appear on the display, to the right of the time, when the music system is in CD mode.
4. Press the **PLAY/PAUSE** button to pause a loaded disc. press again to resume.
5. Press the **STOP** button to stop a loaded disc .

Programming a CD

1. Follow the instructions for Playing a CD.
2. Press the **STOP** button.

   The loaded disc must be stopped to create a program.
3. Press the **PROG.** button on the front of the music system.

   "PROG" and a number, indicating the order in which the next selected track will play, will appear on the display.
4. Press the **SKIP/SEARCH** buttons to select a track.
5. Press the **PROG.** button again to save the selected track to the program.
6. Repeat steps 4 and 5 to program up to 20 tracks to play in the order they were selected.

Cancelling a Programmed CD

1. After programming the CD, press the **STOP** button twice to cancel the program.

Tuning the FM Radio

1. Press the **POWER** button to power the music system on.
2. Press the **SOURCE** button to switch to FM radio mode.

   "FM" will appear on the display.
3. Press the **TUNE +/-** buttons to tune the FM radio.

   Adjust the position of the FM wire antenna to improve FM radio reception.

Saving an FM Radio Station

1. Follow the instructions for Tuning the FM Radio.
2. Press the **TUNE +/-** buttons to tune the FM radio to the desired station.
3. Press the **MEM/CLK SET** button on on the music system or the **MEM/CLK SET** button on the remote.

   A preset number (P01) will appear on the display, indicating which preset the current station will be saved to.
4. Press the **MEM +/-** buttons to adjust the preset number (P01 - P20).
5. Once the desired preset is selected, press the **MEM/CLK SET** button on the music system or the **MEM/CLK SET** button on the remote to save the current FM radio station to the selected preset.

Playing a Saved Radio Station

1. Follow the instructions for Tuning the FM Radio and Saving an FM Radio Station.
2. Press the **MEM±** buttons to cycle through saved radio stations.

Pairing a Bluetooth Device for the first time

1. Press the **POWER** button to power the music system on.
2. Press the **SOURCE** button to switch to Bluetooth mode.
   " " will appear on the display and blanking.
3. Press and hold the **PAIRING/PLAY/PAUSE** button to begin pairing to a Bluetooth device, " " will flash quickly.
4. Using the native controls on your Bluetooth device, select the **SRCD2731BT** in your Bluetooth settings to pair. If your device requests a password, enter the default password "0000".
   Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.
5. When successfully paired and connected, a beep will issue from the unit and the " " will display a solid light.
   After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or your find it is unable to connect, repeat the above steps.

Playing Audio Wirelessly

1. After pairing to a Bluetooth device, use the native controls on the connected Bluetooth device to select a track.
2. Play, pause or skip a selected track using the native controls on the connected Bluetooth device or the controls on the unit machine.
3. Audio played trough the connected Bluetooth device will now be heard through the speakers.

Line in

Using the 3.5mm Audio Input

Requires a 3.5mm audio cable (not included).

1. Connect a 3.5mm audio cable to the LINE IN jack on the music system and the headphone jack or 3.5mm audio output on an MP3 player or other audio source.
2. Press the **POWER** button to power on the music system.
3. Press the **SOURCE** button to switch to LINE IN mode.
4. Use the native controls on the connected MP3 player or other audio source to control the music played through the music system.

Using Headphones (not included)

If you would like to listen to your music privately through the use of headphones, you may do so in one step. Simply plug your eadphones into the phones jack, located on front the unit. Compatible headphones have a 3.5mm diameter stereo plug and an impedance of 8-32 Ohms. When your headphones are connected, the stereo speakers are automatically disconnected.

Specification

Power Adaptor:	AC input 120V~60Hz DC Output 10.5V ⎓ 1.5A
Bluetooth:	Bluetooth Specification version 2.1 Support profile A2DP
Frequency Range:	FM 87.5 – 108 MHz
Power output:	5W (RMS) x 2
Dimensions:	32cm (H) x 72 cm (W) x 21 cm (D)
Weight:	6 Kg.

SYLVANIA

LIMITED PRODUCT WARRANTY

This quality product is warranted to be free from manufacturer's defects in material and workman-ship, provided that the unit is used under the normal operating conditions intended by the manufacturer.

Should you have any problem with this product, please and it is highly recommended to visit our website at www.curtisint.com before you take any other steps as we have additional copies of instruction manuals, operating manuals and trouble shooting tips on our website which gives you the answer on most of the questions you could have in operating the unit.

TERMS OF WARRANTY

C.I. Service Dept. warrants this product to be free from defects in materials and workmanship for 90 days on parts and 90 days on labor. If you originally purchased your product more than 90 days ago, a repair fee may apply.

Nothing within this warranty shall imply that C.I. will be responsible or liable for any damage to any items placed in this product, whether due to any defect of the product, or its use, whether proper or improper.

EXCLUSIONS

Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), there are no other warranties, conditions, representations or guarantees, express or implied, made or intended by C.I. or its authorized distributors and all other warranties, conditions, representations or guarantees, including any warranties, conditions, representations or guarantees under any Sale of Goods Act or like legislation or statue is hereby expressly excluded. Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), shall not be responsible for any damages to persons or property, including the unit itself, howsoever caused or any consequential damages arising from the malfunction of the unit and by the purchase of the unit, the purchaser does hereby agree to indemnify and save harmless C.I. from any claim for damages to persons or property caused by the unit.

TO OBTAIN REPAIRS UNDER THE TERMS OF THIS WARRANTY

1. The original purchaser must present a copy of the original bill of sale and the service warranty card.
2. Any alterations, abuse, misuse, battery corrosion or accidental damage voids the warranty.
3. The warranty does not cover cabinets and accessories.
4. No warranty or insurance contained or set out shall apply when damage or repair is caused by power failure; damage in transit or when moving the unit; improper power supply; use for commercial or industrial purposes; service calls resulting in customer education, etc.
5. The defective product should be mailed to:

Canada
C.I. Service Dept.
315 Attwell Drive
Toronto, ON
M9W 5C1

U.S.A
Curtis International Ltd
c/o Liquidity Services/Liquidation.com
1399 Perry Road
Plainfield, IN
46168

For service assistance and product information, please call: 1-800-968-9853.

If mailing the product, the freight must be prepaid and a money order for $7.00 should be included to cover the cost of insurance and the return of the product.

6. C.I. reserves the right to repair or replace the parts which have become defective.

Model No. _____ Date Purchased _____ Serial No. _____

SYLVANIA is a registered trademark of OSRAM SYLVANIS Inc. used under licence.